




METAL FORMS CORPORATION
SINCE 1909

Set-Up Instructions for Slim-Line Curb & Gutter Forming System

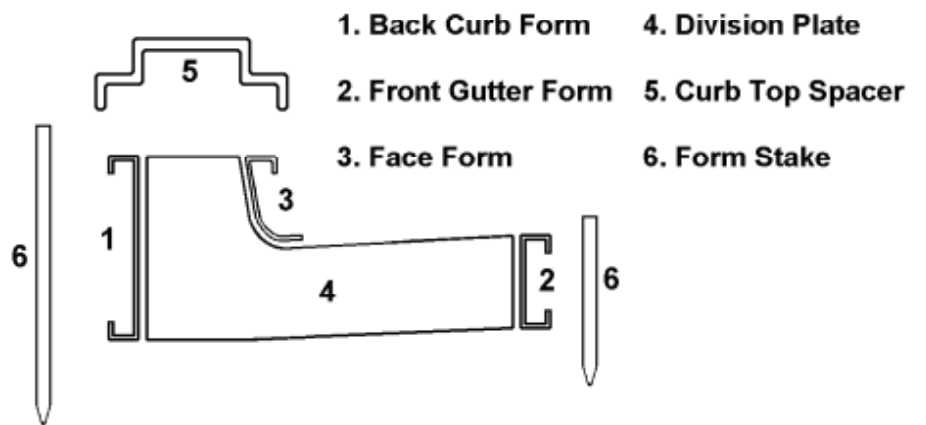

1. Set the curb side of the Slim-Line forming system first.
2. Use Steel Stakes and a string line to mark the grade to the proper elevation.
3. Position the first SLIM-LINE form parallel with the string and put a Steel Stake in each of the stake pockets (minimum of 3 steel stakes for each 10' length).
4. Check the form position and drive in the Steel Stakes. Raise the form to grade and use the stake pocket wedges to secure the form.
5. Connect the second SLIM-LINE form to the first, and put a Steel Stake in each of the stake pockets.
6. Position the second form and drive in the Steel Stakes. Raise the form to grade and use the stake pocket wedges to secure the form.
7. Repeat this procedure to set the entire curb side of the SLIM-LINE system.
8. Hook the Division Plates (or Skeleton Plates) over the top of the curb side forms that are in position (minimum of 2 Division Plates for first 10' length and 1 for each subsequent 10' length). Division Plates are used as guides for positioning the gutter side of the SLIM-LINE forming system.
9. Position the gutter side form opposite the curb side form.
10. Hook the Division Plates over the top of the gutter side form and put a Steel Stake in each of the stake pockets (minimum of 2 Steel Stakes for each 10' length).
11. Check the form position and drive in the Steel Stakes. Raise the form to grade and use the stake pocket wedges to secure the form.
12. Repeat this procedure to set the entire gutter side..
13. Set the Curb Face Form on the Division Plates and secure the form with the Top Spreader (minimum of 2 Top Spacers for each 10' length).
14. Repeat this procedure to set the entire curb face.
15. Spray the form faces with form release before concrete placement.