



Read all instructions before using

SAFETY PRECAUTIONS

Caution: Keep clear of rotating shaft.

Use safety glasses.

Use face or dust mask if operation is dusty.

Speed Screed 186 (Solo Series 2000)

Serial # _____

Engine # _____



Contents

Part 1

Introduction **1-1**

- Before Using Your Solo 1-1
- Setting the Adjustable Handle 1-2

Part 2

Operating and Servicing **2-1**

- Operating Instructions and Vibration Adjustment 2-1
- Taking Care of Unexpected Problems 2-2
- Maintenance 2-3

Part 3

Specifications - Standard Items **3-1**

- Technical and Consumer Information 3-1
- Parts List 3-2
- Front View 3-3
- Back View 3-4
- Warranty 3-5

Part 4

Specifications - Accessory Items **4-1**

- Options and Accessories 4-1
- Dual Dog 4-1
- Float Pan 4-1
- Strike-Off 4-1

Part 5

Supplements **5-1**

- Warranty Card Instructions 5-1
- Additional Field Instructions Available 5-2
- Common Replacement Parts for Engines 5-3
- Metal Forms Corporation Quality Inspection Checklist
- Robin Warranty Information Card
- Robin Engine Manual

INTRODUCTION

Before Using Your Solo:

Be sure to pay special attention to torque settings.

<i>Standard Torque Values</i>	
0.118 in. (3 mm) Thread-Diameter Philips Screw	0.7 lb•ft (1 N•m)
0.197 in. (5 mm) Thread-Diameter Philips Screw	3.6 lb•ft (5 N•m)

1. Read the owner's manual before starting or using your Screed unit.
2. Remove Solo unit from box.
3. Take note of loose parts:
 - oil
 - fasteners
4. Add Oil: Set Solo unit on a flat surface; Use the kickstand to support the unit.

Adding Oil to the Crankcase – Initial Use: *Your SOLO unit is shipped “dry” for safety purposes. Prior to starting your Honda engine, you must add oil to the crankcase. Using the proper type and weight of oil in the crankcase is extremely important. Check the oil before each use and change the oil regularly. Failure to use the correct oil, or using dirty oil, can cause premature engine wear and failure. See the Robin EOH35 owner's manual for more information.*

Engine Oil Recommendations: *Oil is a major factor affecting performance and service life. Use 4-stroke automotive detergent oil. SAE 10W-30 is recommended for all temperatures within the recommended operating range. The recommended operating range extends from 23° F (-5° C) to 104° F (40° C). The SAE oil viscosity and service classification are listed on the API label of the oil container. Honda recommends that you use the API SERVICE category SF or SG oil.*

5. Adjust handlebar to user preference (see next page).

Please Note:

If engine is ever removed from Solo Unit, permanent damage can occur to drive shaft if engine is not properly seated:

1. Orient the mounting hole from screw with the hole on the driveshaft housing. If you cannot get the holes to align, it is because the driveshaft is not fully seated. Most likely, the splines are not aligned with the engine. Try the following:
 - ✓ wiggle or twist the engine, while pressing onto the driveshaft housing.
 - ✓ turn the eccentric weights by hand, while pressing the engine onto the shaft. You will feel the engine “drop” into position once the splines are lined up.

If the holes are not aligned, the engine is not properly seated on the driveshaft, and the driveshaft splines will grind off as soon as the engine is started.

If the alignment screw will not go through the alignment hole, the driveshaft is not fully seated.

2. Once the engine is seated, re-install screw on the Engine Mounting Bracket.
3. Securely tighten screws to 3.6 lb•ft (5 N•m).

INTRODUCTION

Setting the Adjustable Handle:

The adjustable handle can be moved “in” or “out” by loosening the holding clamps located on the bottom side of the machine. Each holding clamp is secured with four (2) clamping knobs. Adjust the handle to meet the needs of the operator. Tighten all knobs. See Part 3 for detailed drawings.

OPERATING and SERVICING

Operating Instructions and Vibration Adjustment:

The following are conditions which might require the operator to adjust the amount of vibration:

- 1) Concrete is extremely wet; Too much water being brought to surface.
- 2) Concrete is “raising” (bubbling up) behind the strike-off attachment.
- 3) The pour is narrow; Six (6) feet wide or less.


The counterweight (eccentric weight) is preset at the factory for maximum force of vibration output. Therefore, any adjustment made will decrease the force of vibration. Decreasing engine speed (releasing throttle lever pressure) will decrease the amount of force, as well as the frequency of vibration. If it is deemed necessary to adjust the force of vibration, it can be accomplished by adjusting the counterweight (see steps below).

*If concrete is “tearing”, or the amount of water near the surface is very low, the operator must slow the rate of travel.

Adjusting the Counterweight

- 1) Loosen set screw (A) using a 1/8” hex key.
- 2) Rotate eccentric weight (A) to the desired location; Rotating it 180° will cancel out all vibration.
- 3) Tighten set screw (A).

Below: close-up of encircled area on page 3-4

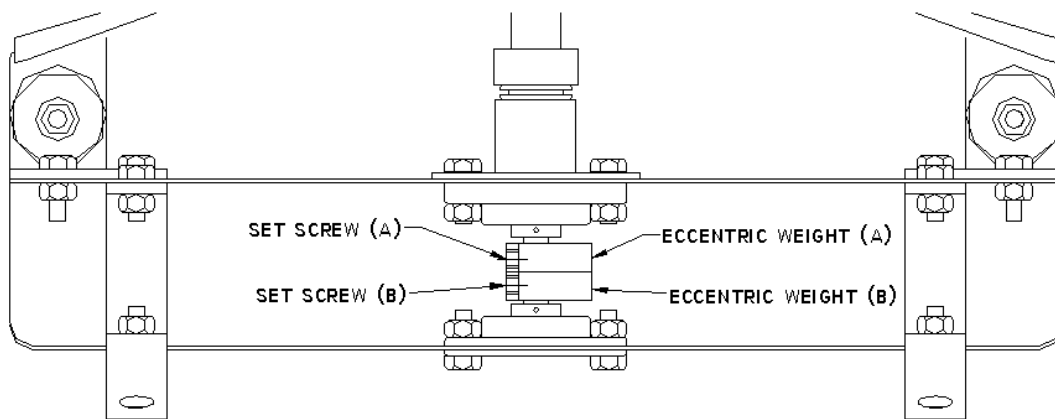

FILENAME: ENGINEERING DRAWINGS\185-707-L.DWG

OPERATING and SERVICING

Taking Care of Unexpected Problems:

Engine Starting Problems

ENGINE WILL NOT START	POSSIBLE CAUSE	CORRECTION
Check control positions	Ignition switch is OFF	Turn ignition switch ON
	Choke not in CLOSED (cold engine) position.	Move choke to the CLOSED position
Check fuel	Out of fuel	Add fuel
	Bad fuel, stored without treating or draining gasoline, refueled with bad gasoline.	Drain fuel tank and carburetor, refuel with fresh gasoline
Remove spark plug	Spark plug faulty, fouled, or has incorrect gap	Clean, gap, or replace the spark plug

Engine Operating Problems

LOW POWER OR ENGINE SPEED WON'T INCREASE	POSSIBLE CAUSE	CORRECTION
Check air filter	Filter dirty or clogged	Check, clean or replace air filter
Check fuel filter	Filter dirty or clogged	Replace fuel filter
Check throttle cable	Out of adjustment, broken, or bent	Adjust cable, or replace if necessary
Check spark arrester	Screen clogged	Clean screen

Vibration Problems

PROBLEM	POSSIBLE CAUSE	CORRECTION
No Vibration	driveshaft splines stripped, driveshaft broken, or driveshaft not properly seated into engine.	replace driveshaft or properly install driveshaft (see manual MN-02-05 for driveshaft replacement instructions)
Very little vibration	Eccentric weights not properly adjusted	align eccentric weights; ensure set screws are tight.
Excessive vibration in the frame or handlebars.	1. Failed Bearing	Check bearing for metal-to-metal wear. Replace bearing if excessive wear is noted.
	2. Frame cracked	Check welds on frame. Repair if necessary.
	3. Float attachment is loose.	Check bolts securing float attachment to machine. Replace with flanged/serrated head type.

OPERATING and SERVICING

MAINTENANCE:

Refer to Robin engine owner's manual for exact engine maintenance specifications

A. Before Each Use

1.	Check engine oil level and quality.
2.	Check air filter.
3.	Check for any loose or missing bolts, nuts, or screws

B. After Each Use

1.	Clean concrete off bearings, eccentric weights, and engine. Use a brush and clean water.
2.	Check air filter.

C. After first ten hours of use

1.	Change engine oil.
2.	Check bearing grease.
3.	Check throttle cable tension.
4.	Check torque on nuts, bolts, and fasteners.

D. After every 20 hours

1.	Remove engine and check driveshaft grease. Grease will have a tendency to be driven down the machine by the rotating shaft.
2.	Check bearing grease and wear.
3.	Check throttle cable tension.
4.	Check screws, nuts, bolts, and other fasteners.
5.	Check for weld failures due to excessive vibration. Repair if necessary.

E. Annually

1.	Driveshaft: remove engine, aluminum driveshaft housing, and frame weldment. Remove driveshaft from bearings. Check driveshaft splines for wear. Replace driveshaft if necessary.
2.	Driveshaft Liner: Check driveshaft nylon sleeve (inside of aluminum tube) for excessive wear. Replace sleeve if necessary. Repack with driveshaft grease.
3.	Bearings: Remove bearings. Inspect for wear. Perform maintenance or replace as necessary.
4.	Frame Weldment: Check for weld failures due to excessive vibration. Repair if necessary.

Always:

- ✓ use a thread-locking compound such as Loctite when re-assembling your Solo Unit.
- ✓ use flanged/serrated-head cap screws with lock washers and lock nuts.
- ✓ use proper torque settings based on thread size.

SPECIFICATIONS – Standard Items

TECHNICAL & CONSUMER INFORMATION:

ENGINE	
Make	Robin/Subaru
Model	EHO35
Engine type	4-stroke, overhead valve, single cylinder
Displacement	2.04 cu-in (33.5 cc)
Bore & stroke	1.54 x 1.10 in (39 x 28 mm)
Max. output	1.60 hp at 7000 rpm
Max. torque	1.30 ft-lbs (1.76 N•m) at 5000 rpm
Ignition system	Transistorized magneto
Spark plugs	NGK CMR6A
Starting system	Recoil
Fuel	Automotive Unleaded Gasoline
Fuel tank capacity	0.17 US gal. (0.65 litres)
Oil capacity	0.026 US gal. (0.1 litre)
Carburetor type	Diaphragm type (overflow return) with fuel pump
Air cleaner	Single element, semi-wet
Engine switch	Rocker type
Weight, dry	7.72 lb. (3.5 kg)
Dimension (LxWxH)	7.52 x 9.21 x 9.69 in. (191 x 234 x 246 mm)


SPECIFICATIONS – Standard Items

PARTS LIST: Refer to the drawings on the following pages.

Bill of Materials			
Item No.	Part No.	Description	Qty. req'd per Solo unit
1	046-910	Throttle lever	1
2	186-673	Handlebar weldment w/kickstand	1
3	186-541	drive shaft	1
4	041-125	¼" flat washer	4
	025-420	Knob, clamping, 5/16"-18 x 1-1/2	4
5	040-425	¼" lock nut	4
	042-125	¼" lock washer	4
6	185-733	shaft coupler weldment	1
7	020-422	3/8" x 2-1/4" hex bolt	2
8	185-774	Isolation mount bracket, r.h.	1
9	185-760	reinforcement plate	1
10	020-491	3/8" serrated/flanged head hex bolt	As req'd
11	186-355	Handle bar mounting bracket	1
12	186-362	frame weldment	1
13	048-745	shaft collar	1
14	185-523	bushing	1
15	185-773	Isolation mount bracket, l.h.	1
16	185-711	vibration unit housing	1
17	185-722	Float attachment mount	2
18	044-755	Handle grip	2
19	042-138	3/8" lock washer	As req'd
	040-438	3/8" lock nut	As req'd
20	186-657	Handle retainer clamp	2
21	186-531	Driveshaft housing with liner	1
22	028-238	set screw	2
23	041-131	5/16" flat washer	2
	040-438	3/8"-16 lock nut	as req'd
24	041-250	vibration washer	2
	185-715	vibration isolation mount	4
25	040-438	3/8" lock nut	As req'd
26	186-126	Throttle cable	1
27	044-101	u-bolt	2
28	020-491	3/8" serrated/flanged head hex bolt	As req'd
29	186-705	Vibration unit assembly	1
30	185-730	bearing	2
31	185-740	eccentric weight	2


SPECIFICATIONS - Standard Items

Front View: Unit shown without engine.

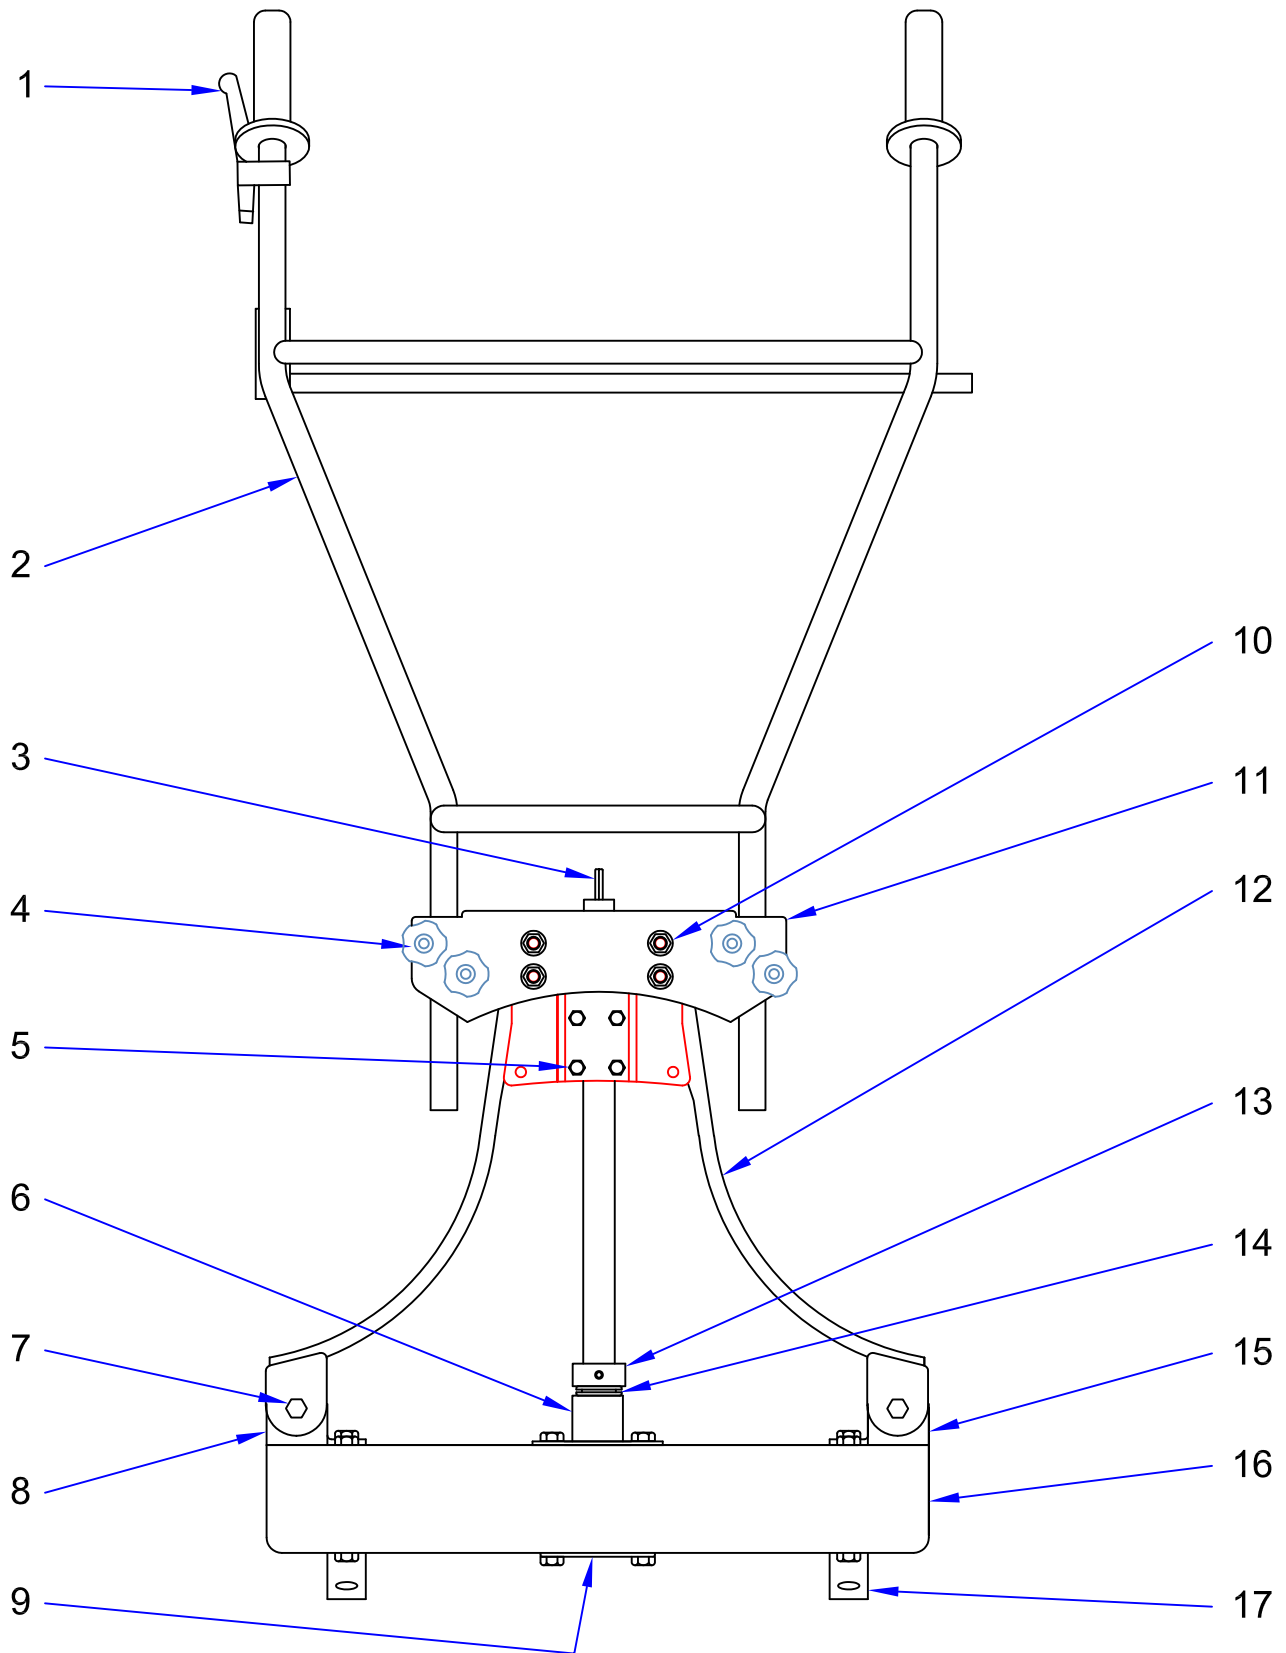

SPECIFICATIONS - Standard Items

Back View: Unit shown without engine.

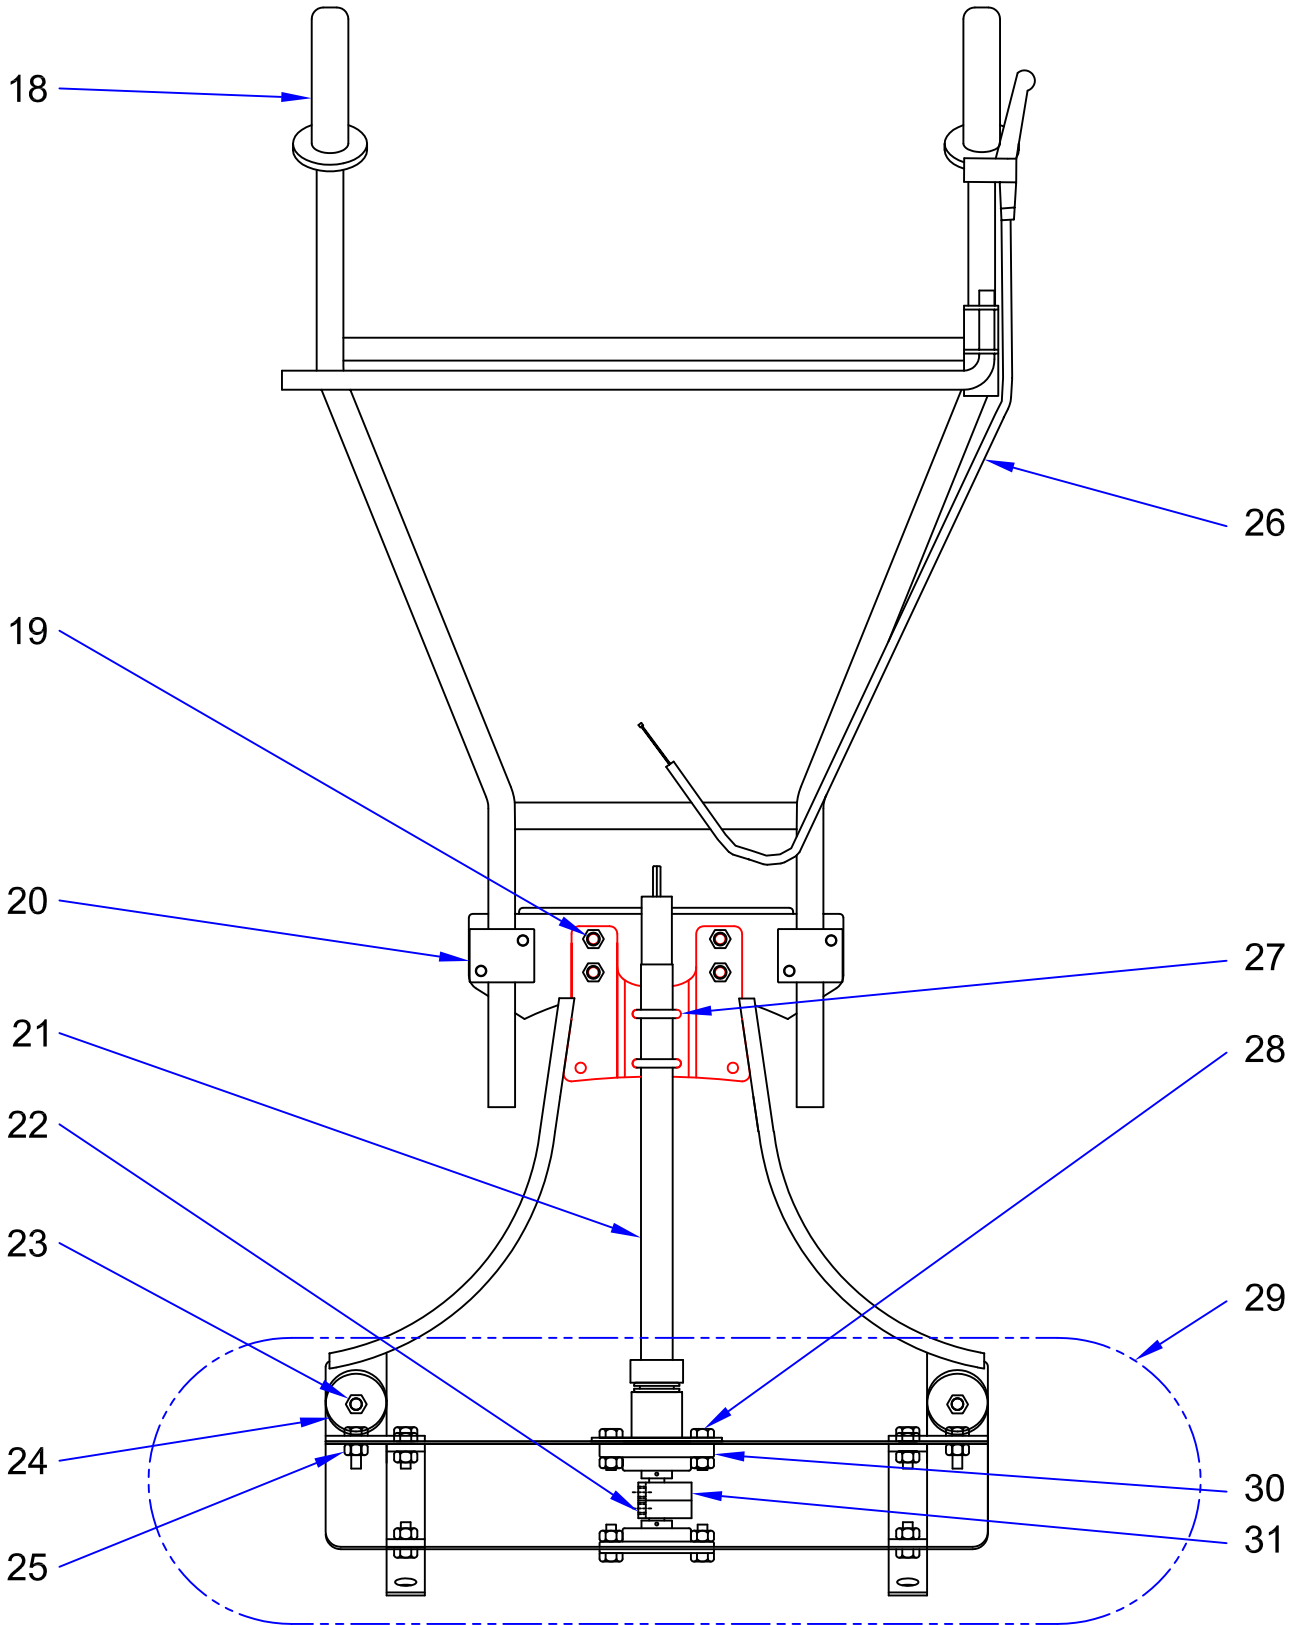

SPECIFICATIONS – Standard Items

Warranty

Metal Forms Corporation warrants, solely to the original purchaser, its products to be free on the date of delivery from defects in material and workmanship. Metal Forms Corporation's obligation under this warranty is conditioned upon Metal Forms Corporation receiving notice of the defect within ten (10) days of discovery, and shall be limited to repairing or replacing, at its option, at its factory, any part or parts, which shall be returned to it with transportation charges prepaid, and which its examination shall disclose, to its satisfaction, to have been thus defective: PROVIDED that this limited warranty shall be effective only if such part or parts shall be so returned to Metal Forms Corporation not later than ninety (90) days after initial delivery of the products to the original purchaser. Metal Forms Corporation neither assumes or authorizes any other person or entity to assume for Metal Forms Corporation any other liability in connection with the sale of the products. No waiver, alteration, or modification of the foregoing conditions shall be valid unless made in writing, and signed by an executive officer of Metal Forms Corporation.

This warranty shall not apply in the event the products shall have been repaired or altered outside of Metal Forms Corporation, or if the products have been subject to abuse, misuse, negligence, or accident.

THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. BUYER ACKNOWLEDGES THAT THERE ARE NO WARRANTIES THAT WILL EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF, UNLESS IN WRITING AND SIGNED BY BOTH SELLER AND PURCHASER.

The Buyer acknowledges that (s)he is not relying on Metal Forms Corporation's skill or judgment to select or furnish machines or equipment suitable for any particular purpose.

METAL FORMS CORPORATION MAKES NO WARRANTIES OR REPRESENTATIONS AND ASSUMES NO RESPONSIBILITIES IN RESPECT TO PARTS OR COMPONENTS NOT MANUFACTURED BY METAL FORMS CORPORATION.

NOTWITHSTANDING THE PROVISIONS OF ANY APPLICABLE STATUE, THE REMEDIES AVAILABLE TO THE BUYER AS SET FORTH IN THIS AGREEMENT, ARE EXCLUSIVE REDEDIES, AND ALL OTHER REMEDIES, STATUTORY OR OTHERWISE, ARE HEREBY EXPRESSLY WAIVED BY THE BUYER. METAL FORMS CORPORATION SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS WARRANTY OR BREACH THEREOF.

SPECIFICATIONS - ACCESSORY ITEMS


OPTIONS and ACCESSORIES:

Tool Kit: P/N 195-851 INCLUDES SPARK PLUG AND HANDLE FOR HONDA GX31.

SHOULDER HARNESS: 195-855: HARNESS
195-862: HANGER CLIP

"DUAL DOG": REVERSIBLE ALUMINUM SCREED BAR ATTACHMENT
AVAILABLE IN 8 FT., 10 FT., 12 FT., OR 16 FT. WIDE. 16-FOOT
WIDE REQUIRES 2 POWER UNITS. WEIGHT: 2.1 LBS. PER FT.

DUAL DOG CROSS-SECTION:
2-1/2" TALL X 5" WIDE



ALUMINUM FLOAT PAN: AVAILABLE IN SIZES 8 FT., 10 FT., OR 12 FT. WIDE. WEIGHT: 1
LB. PER FOOT.

FLOAT PAN CROSS SECTION
2-1/2" TALL X 5" WIDE.



**ALUMINUM STRIKE-OFF
TUBE:** AVAILABLE IN VARIABLE LENGTHS UP TO 12 FT. WEIGHT: 1
LB. PER FT.

STRIKE-OFF CROSS-SECTION
2" X 2" SQUARE



SUPPLEMENTS

Warranty Activation Instructions :

In order to activate your warranty, you must submit the requested purchaser information (below) to Metal Forms Corporation. You may fax it in, call it in, or mail it in.

FAX: 414-964-4550

PHONE: 414-964-4550

MAIL: 3334 North Booth Street, Milwaukee, WI 53212

- ✓ WE MAY NOT BE ABLE TO GRANT WARRANTY CLAIMS IF THE ACTIVATION IS NOT ON FILE.

Warranty Activation Card

Company Name: _____

Company Address: _____

Date of Purchase: _____

Name of Dealer: _____

Serial #: _____

SUPPLEMENTS

Additional Field Instructions Available :

The following instructions are available for immediate faxing to your location. Call us at (PHONE) 414-964-4550 or FAX: 414-964-4550.

	Instruction #	Title	Abstract
<input checked="" type="checkbox"/>	MN-02-04	Quick-release mounting kit instruction sheet.	<i>A quick-release fasteners kit is available for attaching float pans, Dual Dogs, aluminum strike-offs, and 2x4's to your Solo unit.</i>
<input type="checkbox"/>	MN-02-05	Honda-powered driveshaft assembly.	Instructions on replacing the drive shaft on your Honda-powered Solo unit. Includes sequence of disassembly and re-assembly.
<input type="checkbox"/>	MN-02-07	Float mounting plate retrofit installation.	The current float pans include reinforcement steel plates which significantly extend the life of the aluminum float pan. Any float pan can be retrofitted with our <i>Float Pan Retrofit Kit</i> .
<input type="checkbox"/>	MN-02-13	Vibration isolation conversion kit.	Installation and conversion instructions for replacing the obsolete bellows design, with the improved shaft-collar design.

SUPPLEMENTS

Most Common Replacement Parts for Engines :

The following parts are available for shipping to your location. Call us at 414-964-4550 or FAX: 414-964-4550.

ROBIN EH035 REPLACEMENT PARTS

	Part #	Description	Qty. Req'd
√	185-149	Air filter	1
	185-159	Air filter cover	1
	185-160	Carburetor assy.	1
	185-141	Clutch Housing (includes fasteners)	1
	185-146	Cover, top (yellow plastic)	1
	185-148	Fuel tank assy.	1
	185-147	Fuel Tank Cap	1
	185-143	Robin EH035 engine (clutch assy. and throttle assy. not incl.)	1
	039-502	spark plug, NGK CMR6A	1
	185-140	Tank Guard (fuel tank protective cover – includes fasteners)	1
	185-142	Throttle Assembly (includes lever, cable, and hand grip)	1